




















Original	Substitut
	Power
	Mute
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	Audio / Lang I/II
	Text / Goto
	TV/Radio /
	Setup / OPT /
	AV / Input / RDS
	Menu / Home
	Up
	Info / Angle
	Left
	OK

Original	Substitut
	Right
	Exit / Cancel / Clear
	Fav / Marker / PC
	Down
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8





Original	Substitut	Original	Substitut
9	9		
GUIDE	Guide / EPG / -/--		
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Return	Back / Return		
Netflix	Shift + Red / Netflix /		
video prime	Shift + Blue / Prime		

Original	Substitut

