






































 


 












 


Original	Substitut
 Power Tv	 Power
 Power STB	 Shift + Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Substitut
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Shift + Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Original	Substitut
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Ball	 Display / Media
 Search	 Shift + Red / Netflix /
 Keypad	 Picture / Format
 E-Manual	 D.Menu / Top
 D	 Audio / Lang I/II
 AD/Subt	 Subtitle / EQ
	
 Pause	 Pause / Step / Freeze
	
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Substitut

