

 

 





Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 Text / Play/Pause	 Play / Slow	 Right	 Right
 Text / Play/Pause	 Pause / Step / Freeze	 Exit	 Exit / Cancel / Clear
 Stop / Still	 Stop / Hold	 Down	 Down
 Rec	 Rec / Rec Mode	 Recall	 Back / Return
 Audio I/II	 Audio / Lang I/II	 Vol +	 Vol+
 Subtitle / [≡o]	 Subtitle / EQ	 List	 Smart / List
 [≡x]	 Picture / Format	 CH +	 CH+ / Page+
 Size / Aspect	 Zoom / Size	 Vol -	 Vol-
 Sleep	 Sleep / Timer	 Index	 Display / Media
 Radio	 TV/Radio /	 CH -	 CH- / Page-
 DMP	 D.Menu / Top	 1	 1
 Source	 AV / Input / RDS	 2	 2
 Menu	 Menu / Home	 3	 3
 Up	 Up	 4	 4
 Info	 Info / Angle	 5	 5



