


 

 

 
 







 
 






| Original | Substitut |
|--|--|
|  TV Power |  Power |
|  NET |  Display / Media |
|  [i+] |  Info / Angle |
|  P.Info |  Shift + Info / Angle |
|  ATV |  Shift + Setup / OPT / Tools |
|  DTV |  Setup / OPT / |
|  SAT |  Shift + 0 |
|  Radio |  TV/Radio / |
|  Power Source |  Shift + Power |
|  <<< |  <<< / Tune- |
|  Play |  Play / Slow |
|  >>> |  >>> / Tune+ |
|  Control |  Smart / List |
|  Rec |  Rec / Rec Mode |
|  Rec Stop |  Shift + Stop / |
|  Stop |  Stop / Hold |
|  Ready |  Eject / Surround |

| Original | Substitut |
|---|---|
|  ← |  I<<< / Preset- |
|  |  Pause / Step / Freeze |
|  → |  >>>I / Preset+ |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  S |  Fav / Marker / PC |
|  0 |  0 |
|  S |  AV / Input / RDS |
|  I/II/I+II |  Audio / Lang I/II |
|  [<I>] |  Zoom / Size |





| Original | Substitut | Original | Substitut |
|----------|-----------------------|----------|-----------------------------|
| AV Mode | D.Menu / Top | Back | Back / Return |
| Eco | Picture / Format | [...] | Subtitle / EQ |
| Mute | Mute / Dimmer | [=/?] | Sound / Title |
| Vol+ | Vol+ | [=o] | Sleep / Timer |
| PR+ | CH+ / Page+ | [=+] | Shift + Pause / Step / |
| Text | Text / Goto | Red | Red / Netflix / Search |
| Vol- | Vol- | Green | Green / APP / Repeat |
| PR- | CH- / Page- | Yellow | Yellow / YouTube / Repeat |
| Menu | Menu / Home | Blue | Blue / Prime Video / Random |
| EPG | Guide / EPG / -/-- | | |
| -- | Shift + OK | | |
| Up | Up | | |
| Left | Left | | |
| OK | OK | | |
| Right | Right | | |
| End | Exit / Cancel / Clear | | |
| Down | Down | | |

| Original | Substitut | Original | Substitut |
|--|-------------|----------|-------------|
| TV | DVD | SAT | AUX |
| SLOW | STEP-FREEZE | HOLD | REC MODE |
| PLAY | STOP | PRESET+ | PRESET- |
| TUNE- | TUNE+ | EQ | SURROUND |
| TITLE | LANG UI | EQ | SURROUND |
| SOUND | AUDIO | SUBTITLE | PROGRAM |
| FORMAT | SIZE | TIMER | TV RADIO |
| PICTURE | ZOOM | SLEEP | RDS |
| TOP MENU | OPT-TOOLS | GOTO | AV INPUT |
| D.MENU | SETUP | TEXT | |
| HOME | ANGLE | INFO | |
| MENU | OK | RETURN | |
| CLEAR | EXIT | BACK | |
| CANCEL | LIST | CH PAGE | |
| VOL+ | SMART | MEDIA | |
| VOL- | DISPLAY | TV | DVD |
| TV | CD-STB | 1 | 2 |
| 1 | 3 | 4 | 5 |
| 4 | 6 | 7 | 8 |
| 5 | 9 | 8 | 9 |
| 6 | 0 | 9 | FAV MARKER |
| 7 | NETFLIX | APP | YouTube |
| 8 | SEARCH | REPEAT | Prime Video |
| 9 | REPEAT A-B | RANDOM | |
| 0 | | | |
| FAV MARKER | | | |
| NETFLIX | | | |
| APP | | | |
| YouTube | | | |
| Prime Video | | | |
| SEARCH | | | |
| REPEAT | | | |
| REPEAT A-B | | | |
| RANDOM | | | |
| Mandis SHOP | | | |
| www.mandis.tv | | | |

