




 



 









 



 







 




 
 
 
 

 

 
 



 
 
 
 
 



 

 

 
 


 




| Original   | Substitut  |
|--|--|
|  Operate          |  Power            |
|  Timer On/Off     |  Shift + AV      |
|  Showview         |  Media            |
|  Eject            |  Eject            |
|  Display          |  Info             |
|  On Screen        |  3D               |
|  VCR/DVD Selector |  Smart            |
|  VCR Menu         |  Menu             |
|  Function Control |  Options          |
|  Prog/Repeat      |  Text             |
|  Angle           |  Red             |
|  Title          |  List           |
|  DVD Menu       |  D. Menu        |
|  Open/Close     |  Shift + Eject |
|  Clear          |  Exit           |
|  Up             |  Up             |
|  Down           |  Down           |

| Original  | Substitut  |
|---|--|
|  Right         |  Right    |
|  Left          |  Left     |
|  Set           |  Ok       |
|  1             |  1        |
|  2             |  2        |
|  3             |  3        |
|  4             |  4        |
|  5             |  5        |
|  6             |  6        |
|  7             |  7        |
|  8            |  8       |
|  9           |  9      |
|  0           |  0      |
|  -/--/AM/PM  |  Guide  |
|  Zero Back   |  Subt   |
|  Skip Search |  Format |
|  Tv/VCR      |  TV/R   |






 


 








 





 




 

 
 

 
 
 
 



 


 
 

 

 

 

 
 


 


| Original       | Substitut | Original | Substitut |
|----------------|-----------|----------|-----------|
| VCR<DVD        | Blue      |          |           |
| Input Select   | AV        |          |           |
| <<             | <<        |          |           |
| Play           | Play      |          |           |
| >>             | >>        |          |           |
| Rec            | Rec       |          |           |
| Stop           | Stop      |          |           |
| Pause/Still    | Pause     |          |           |
| Tape Speed     | Green     |          |           |
| I<< Skip/DPSS- | I<<       |          |           |
| Skip           | >>I       |          |           |
| I> Slow        | Yellow    |          |           |
| CH Up          | Ch +      |          |           |
| CH Down        | Ch -      |          |           |
| Audio Output   | Dual      |          |           |
|                |           |          |           |
|                |           |          |           |





| Original   | Substitut  |
|--|--|
|  Operate          |  Power          |
|  Timer On/Off     |  Shift + AV    |
|  Showview         |  Media          |
|  Eject            |  Shift + Eject |
|  Display          |  Info           |
|  On Screen        |  3D             |
|  VCR/DVD Selector |  Smart          |
|  DVD Setup        |  Menu           |
|  Function Control |  Options        |
|  Prog/Repeat      |  Text           |
|  Angle           |  Red           |
|  Open/Close     |  Eject        |
|  Title          |  List         |
|  DVD Menu       |  D. Menu      |
|  Return         |  Back         |
|  Up             |  Up           |
|  Down           |  Down         |

| Original  | Substitut  |
|---|--|
|  Right         |  Right    |
|  Left          |  Left     |
|  Enter         |  Ok       |
|  1             |  1        |
|  2             |  2        |
|  3             |  3        |
|  4             |  4        |
|  5             |  5        |
|  6             |  6        |
|  7             |  7        |
|  8            |  8       |
|  9           |  9      |
|  0           |  0      |
|  -/--AM/PM   |  Guide  |
|  Zero Back   |  Subt   |
|  Skip Search |  Format |
|  Tv/VCR      |  TV/R   |



