 
 


 




 
 


 
 


 
 


 
 

 







 










Original		Substitut		Original		Substitut	
	Power		Power		9		9
	Input		AV / Input / RDS		P+		CH+ / Page+
	TV/DVD		TV/Radio /		[i+]		Info / Angle
	DTV/ATV		Smart / List		0		0
	EPG		Guide / EPG / -/-		Recall		Fav / Marker / PC
	[<>]		Picture / Format		P-		CH- / Page-
	Mute		Mute / Dimmer		Red/I<< Skip		Red / Netflix / Search
	1		1		Green/<< Rev		Green / APP / Repeat
	2		2		Yellow/>>FWD		Yellow / YouTube / Repeat
	3		3		Blue/>>I Skip		Blue / Prime Video / Random
	Vol+		Vol+		Pause		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Setup/Tv Menu		Setup / OPT /
	Vol-		Vol-		DVD Menu		Menu / Home
	7		7		Up		Up
	8		8		Left/<I Slow		Left





Original		Substitut		Original		Substitut	
	OK		OK				
	Right/I> Slow		Right				
	Return		Back / Return				
	Down		Down				
	Top Menu		D.Menu / Top				
	Cancel		Exit / Cancel / Clear				
	[...]		Subtitle / EQ				
	[≡◆]/Audio		Audio / Lang I/II				
	Play Mode		Display / Media				
	[≡]/Text		Text / Goto				
	[≡?]/Angle	+	Shift + Info / Angle				
	[≡o]/Zoom		Zoom / Size				
	[≡+]]		Sleep / Timer				

