
















 



 






 

 







Original	Substitut
 RDS ASPM	 D.Menu / Top
 Direct	 Info / Angle
 RDS PTY	 Text / Goto
 On Screen	 Smart / List
 RDS Display	 Setup / OPT /
 Clear / Display	 Display / Media
 Clear / Display	 Exit / Cancel / Clear
 On / Stand By	 Power
 1	 1
 2	 2
 3	 3
 Clock / Timer	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substitut
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Memory /	 Mute / Dimmer
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 Up / Tuning+	 Shift + >> /
 Up / Tuning+	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 >> / >> /	 >> / Tune+
 I<< / << / Preset-	 I<< / Preset-
 I<< / << / Preset-	 << / Tune-
 Down / Tuning-	 Shift + << /

Tune-





Original	Substitut
Down / Tuning-	Down
>> / >> /	>> / Preset+
USB Play/Pause	Pause / Step / Freeze
Slow	Shift + Play /
DVD/CD	Play / Slow
Stop	Stop / Hold
Still	Shift + Pause / Step /
DVD/CD	Shift + 2
DVD/CD	Shift + 3
DVD/CD	Green / APP / Repeat
USB	Shift + 8
USB	Blue / Prime Video / Random
AUX	Shift + 7
AUX	Red / Netflix / Search
TUNER	Shift + 6
TUNER	Yellow / YouTube / Repeat
Audio	Audio / Lang I/II

Original	Substitut
Dolby VS	Sound / Title
Volume-	Vol-
Volume+	Vol+

