 









 

 

 







 



 



 



















Original	Substitut
 Power	 Power
 Play	 Play / Slow
 Still/Pause	 Pause / Step / Freeze
 Stop/Live	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</REV	 << / Tune-
 >>/FWD	 >> / Tune+
 I<< Skip/<I	 I<< / Preset-
 F.ADV II>/Skip	 >>I / Preset+
 DVD Title/Rec List	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Zoom/Mode Rec	 Zoom / Size
 AV Auto Rec	 TV/Radio /
 Direct	 D.Menu / Top
 C/Erase	 Setup / OPT /

Original	Substitut
 Timeshift	 Text / Goto
 Input	 AV / Input / RDS
 DVD Menu/Original	 Menu / Home
 Up	 Up
 CH Display	 Info / Angle
 Left	 Left
 Set/Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+ Tv	 Vol+
 Start Menu	 Smart / List
 CH+ / Page+	 CH+ / Page+
 Vol- Tv	 Vol-
 Display/Back	 Display / Media
 CH- / Page-	 CH- / Page-





Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

