
 






 
 
 
 











 

 












 




Original	Substitut	Original	Substitut
	Power		Red / Netflix / Search
	1		Green / APP / Repeat
	2		Yellow / YouTube / Repeat
	3		Blue / Prime Video / Random
	4		Guide / EPG / -/-
	5		Smart / List
	6		AV / Input / RDS
	7		Menu / Home
	8		Display / Media
	9		Up
	0		Down
	[i+] Info / Angle		Right
	[=] Text / Goto		Left
	YouTube		OK
	Netflix		Back / Return
	Disney Plus		TV/Radio /
	prime video		Shift + Menu / Home





Original	Substitut	Original	Substitut
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Recall		Fav / Marker / PC
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	Help		Zoom / Size
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut

