



 
 
 
 
 


 

 





 





 


 

 

 

 

 

 

 











 

 













Original	Substitut
 Tv Input	 AV / Input / RDS
 One Touch Play	 Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Power	 Power
 DVD/CD	 Red / Netflix / Search
 1	 1
 FM	 Green / APP / Repeat
 2	 2
 USB	 Shift + 8
 3	 3
 Tv/Cable	 Blue / Prime Video / Random
 4	 4
 Audio In	 Guide / EPG / -/--
 5	 5
 Function	 Fav / Marker / PC
 6	 6
 Repeat	 Back / Return

Original	Substitut
 7	 7
 Surround	 Eject / Surround
 8	 8
 EQ	 Shift + Subtitle / EQ
 9	 9
 Audio	 Audio / Lang I/II
 Program	 TV/Radio /
 Subtitle	 Subtitle / EQ
 0	 0
 Angle	 Info / Angle
 Sleep	 Sleep / Timer
 DVD Top Menu	 Shift + Display / Media
 DVD Menu	 D.Menu / Top
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK





Original	Substitut
	 Right
	 Vol+
	 Setup / OPT /
	 Down
	 Display / Media
	 Shift + Sleep / Timer
	 Vol-
	 I<< / Preset-
	 Pause / Step / Freeze
	 >>I / Preset+
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold

Original	Substitut

