



Original	Substitut	Original	Substitut
Standby	Power	10+	Guide / EPG / -/-
Open/Close	Eject / Surround	L/R/ST/Mo	Sound / Title
OSD	Display / Media	P/N	Blue / Prime Video / Random
1	1	Audio	Audio / Lang I/II
2	2	Subtitle	Subtitle / EQ
3	3	Stop/Mem	Stop / Hold
Prog	TV/Radio /	I<</Station-	I<< / Preset-
4	4	>>I/Station+	>>I / Preset+
5	5	Play/Pause/FM/AM	Play / Slow
6	6	Slow	Shift + Play /
A-B	Yellow / YouTube / Repeat	<</Search-	<< / Tune-
7	7	>>/Search+	>> / Tune+
8	8	Step	Pause / Step / Freeze
9	9	Menu	Menu / Home
Repeat	Green / APP / Repeat	Return	Back / Return
Goto	Text / Goto	Angle	Info / Angle
0/10	0	Up	Up

Original	Substitut	Original	Substitut
Standby	Power	10+	Guide / EPG / -/-
Open/Close	Eject / Surround	L/R/ST/Mo	Sound / Title
OSD	Display / Media	P/N	Blue / Prime Video / Random
1	1	Audio	Audio / Lang I/II
2	2	Subtitle	Subtitle / EQ
3	3	Stop/Mem	Stop / Hold
Prog	TV/Radio /	I<</Station-	I<< / Preset-
4	4	>>I/Station+	>>I / Preset+
5	5	Play/Pause/FM/AM	Play / Slow
6	6	Slow	Shift + Play /
A-B	Yellow / YouTube / Repeat	<</Search-	<< / Tune-
7	7	>>/Search+	>> / Tune+
8	8	Step	Pause / Step / Freeze
9	9	Menu	Menu / Home
Repeat	Green / APP / Repeat	Return	Back / Return
Goto	Text / Goto	Angle	Info / Angle
0/10	0	Up	Up





Original	Substitut	Original	Substitut
 Setup	 Setup / OPT /	 Source	 AV / Input / RDS
 Left	 Left	 Treb-	 CH- / Page-
 Enter	 OK	 Bass-	 Shift + CH- /
 Right	 Right	 Vol-	 Vol-
 Clock/Tv-Mode	 Sleep / Timer		
 Down	 Down		
 Title	 Shift + Sound / Title		
 Preview	 Fav / Marker / PC		
 Zoom	 Zoom / Size		
 DVD/USB/Card	 D.Menu / Top		
 PBC	 Smart / List		
 VFD	 Picture / Format		
 EQ	 Shift + Subtitle / EQ		
 Mute	 Mute / Dimmer		
 Treb+	 CH+ / Page+		
 Bass+	 Shift + CH+ /		
 Vol+	 Vol+		

Original	Substitut
	
	
	
	

