










 

 



 








 

 


 
 
Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	TV		Media
	Text		Text
	Info		Info
	PIP		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide

Original	Substitut	Original	Substitut
	Source		AV
	Menu		Menu
	DTV Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	ARC		3D
	Recall		Back
	Mix		Shift + Text
	Subpage		Subt





Original	Substitut
	Hold
	Size
	Reveal
	Update
	Index
	Red
	Green
	Yellow
	Text Store
	Blue
	PIP Prog+
	S.Select
	PIP Prog-
	DTV Page-
	DTV Setup
	Tv/Radio
	DTV Page+

Original	Substitut
	PC
	Dual I-II
	Sleep/Timer
	Still
	SSM
	Text List
	PSM
	DTV Fav
	PIP Input
	PIP Position
	PIP Size
	Swap

	Shift + Media
	Dual
	Shift + Power
	Shift + Subt
	Shift + Dual
	List
	Format
	Pre Ch
	Shift + Red
	Shift + Yellow
	Shift + Green
	Shift + Back

