



Original	Substitut
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Info	Info / Angle
FAV	Fav / Marker / PC
Page+	Shift + CH+ /
Page-	Shift + CH- /
Audio	Audio / Lang I/II

Original	Substitut
Digest	Setup / OPT /
Menu	Menu / Home
EPG	Guide / EPG / -/-
Exit	Exit / Cancel / Clear
Play	Play / Slow
Zoom	Zoom / Size
Pause	Pause / Step / Freeze
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
UP	Up
Down	Down
Right	Right
Left	Left
OK	OK
CH+	CH+ / Page+





Original	Substitut
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 TV/Radio	 TV/Radio /
 Teletext	 Text / Goto
 Subtitle	 Subtitle / EQ
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substitut

