

 
 





 


 





 
 
 


 







 
 




 



 








 
 






 








 




Original	Substitut	Original	Substitut
 Power	 Power	 Info	 Info
 3D	 3D	 P +	 Ch +
 1	 1	 P -	 Ch -
 2	 2	 W	 Shift + Smart
 3	 3	 Smart TV	 Smart
 4	 4	 @	 Media
 5	 5	 Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right / Zoom +	 Right
 9	 9	 Left / Zoom -	 Left
 0	 0	 OK	 Ok
 ECO	 Shift + 3D	 Back	 Back
 Source	 AV	 Exit	 Exit
 Vol +	 Vol +	 Option	 Options
 Vol -	 Vol -	 USB	 Shift + Media
 Mute	 Mute	 TV	 TV/R



