



Original	Substitut
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
	Menu / Home
	Info / Angle
I-II	Audio / Lang I/II

Original	Substitut
	Mute / Dimmer
	Left
	Up
	Right
OK	OK
	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original		Substitut		Original		Substitut	
	[≡o]		Sleep / Timer				
	Hold		Stop / Hold				
	[≡X]		Exit / Cancel / Clear				
	Mix / PIP Swap		Smart / List				
	PIP / Size		Zoom / Size				
	PIP Down / [≡?]		I<< / Preset-				
	PIP Up / Index		>>I / Preset+				
	[TV]		TV/Radio /				
	[AV]		AV / Input / RDS				

