



Original	Substitut
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
	Menu / Home
	Info / Angle
I-II	Audio / Lang I/II

Original	Substitut
	Mute / Dimmer
	Left
	Up
	Right
OK	OK
	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original		Substitut	
[EQ]	[≡o]	TIMER SLEEP	Sleep / Timer
[EB]	Hold	HOLD	Stop / Hold
[EX]	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
[P/P]	Mix / PIP Swap	LIST SMART	Smart / List
[PIP]	PIP / Size	SIZE ZOOM	Zoom / Size
[PIP] [EB]	PIP Down / [≡?]	PRESET-	I<< / Preset-
[PIP] [EB]	PIP Up / Index	PRESET+	>>I / Preset+
[TV]	[TV]	PROGRAM TV/RADIO	TV/Radio /
[AV]	[AV]	RDS AV INPUT	AV / Input / RDS

Original		Substitut	

