 



 



 

 

 

 

 

 

 

 

 

 

 

 



 



 








 


 


 


 

 




 

 







 

 

 







Original	Substitut
 Power	 Power
 TV/Rad	 TV/Radio /
 Mute	 Mute / Dimmer
 TV/SAT	 AV / Input / RDS
 Edit	 Sound / Title
 Sleep	 Sleep / Timer
 Mosaic	 D.Menu / Top
 Freeze	 Shift + Pause / Step /
 Zoom	 Zoom / Size
 EPG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 A-Z	 Eject / Surround
 USB	 Shift + 8
 Text	 Text / Goto
 Info	 Info / Angle

Original	Substitut
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 SAT	 Shift + 0
 SAT	 Display / Media
 Vol-	 Vol-
 Left / V-	 Left
 OK	 OK
 Right / V+	 Right
 Recall	 Back / Return
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 File List	 Smart / List
 Play	 Play / Slow
 Stop	 Stop / Hold





Original	Substitut
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Advance	 >> / Preset+
 Rec	 Rec / Rec Mode
 Slow	 Shift + Play /
 Red / Book	 Red / Netflix / Search
 Red / Book	 Shift + Fav / Marker / PC
 Green	 Green / APP / Repeat
 Yellow / Color	 Yellow / YouTube / Repeat
 Blue / POS	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Substitut
 7	 7
 8	 8
 9	 9
 V-Format	 Picture / Format
 0	 0
 Wide	 Setup / OPT /

