



Original	Substitut
	Mute
	Power
	PP
	I-II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	--
	P<P
	Menu
	Mute / Dimmer
	Power
	Back / Return
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--
	Fav / Marker / PC
	Menu / Home

Original	Substitut
	Info
	Left
	Up
	P+
	Right
	Down
	P-
	Vol-
	Vol+
	Red/Sound
	Red/Sound
	Green/Picture
	Green/Picture
	Yellow/Feature
	Blue/Install
	TV
	AV
	Info / Angle
	Left
	Up
	CH+ / Page+
	Right
	Down
	CH- / Page-
	Vol-
	Vol+
	Red / Netflix / Search
	Red / Netflix / Search
	Green / APP / Repeat
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	TV/Radio /
	AV / Input / RDS



