

 
 
 

 
 

 
 






 














 














 
 
 
 




Original	Substitut	Original	Substitut
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Substitut	Original	Substitut
 Format	 Format	 TV	DVD
 Dual	 Dual	 SAT	AUX
 Back	 Back	 PLAY MODE	REC MODE
 Pre Ch	 Pre Ch	 DISC NAV	SOUND
 Shift + Ch +	 Shift + Ch +	 AD	SETTINGS
 Shift + Ch -	 Shift + Ch -	 LIST	DUAL
 Shift + Format	 Shift + Format	 SUBT	OPT
 Up	 Up	 PROG	SEARCH
 Ch +	 Ch +	 PICTURE	ECO
 Down	 Down	 SLEEP	TV/R
 Ch -	 Ch -	 FORMAT	3D
 Right	 Right	 E-MANUAL	REPEAT
 Vol +	 Vol +	 ZOOM	TIMER
 Left	 Left	 D.MENU	TEXT
 Vol -	 Vol -	 TOP MENU	DISPLAY
 Ok	 Ok	 MENU	INFO
 Menu	 Menu	 EXIT	RETURN





Original	Substitut	Original	Substitut
 Info	 Info	 Slow	 Shift + Play
 TXT	 Text	 Rec	 Rec
 Exit	 Exit	 Media	 Media
 Red / SAT	 Red	 Game	 Smart
 Green / Zoom	 Green	 PVR	 Shift + Smart
 Green / Zoom	 Eject	 HDD	 Shift + Media
 Yellow / Pause	 Yellow		
 Yellow / Pause	 Shift + Pause		
 Blue / TV/Radio	 Blue		
 Blue / TV/Radio	 TV/R		
			
	 Play		
	 Pause		
	 Stop		
			
			

Original	Substitut
 Slow	 Shift + Play
 Rec	 Rec
 Media	 Media
 Game	 Smart
 PVR	 Shift + Smart
 HDD	 Shift + Media

