














 
























































Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search	 CH-	 CH- / Page-
 Green	 Green / APP / Repeat	 Up	 Up
 Yellow	 Yellow / YouTube / Repeat	 Down	 Down
 Blue	 Blue / Prime Video / Random	 Right	 Right
 TV/SAT	 AV / Input / RDS	 Left	 Left
 TV/Radio	 TV/Radio /	 OK	 OK
 Zoom	 Zoom / Size	 Vol+	 Vol+
 List	 Smart / List	 Vol-	 Vol-
 Audio	 Audio / Lang I/II	 Recall	 Back / Return
 EPG	 Guide / EPG / -/-	 P+	 >> / Preset+
 Timer	 Sleep / Timer	 P-	 << / Preset-
 Text	 Text / Goto	 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 1	 1
 Menu	 Menu / Home	 2	 2
 M/P	 Display / Media	 3	 3
 Mute	 Mute / Dimmer	 4	 4






 






























 



















 



 






Original	Substitut
	Power
	SAT
	Info
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0 / Zoom
	0 / Zoom
	Audio
	Mute
	Recall

Original	Substitut
	FAV
	Up / CH+
	Down / CH-
	Up / CH+
	Right / Vol+
	Right / Vol+
	Down / CH-
	Left / Vol-
	Left / Vol-
	OK
	Menu
	Exit
	Blue / Pause
	Blue / Pause
	Red / Text
	Red / Text
	Multivideo


















































Original	Substitut	Original	Substitut
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Substitut	Original	Substitut
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





Original	Substitut	Original	Substitut
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Substitut	Original	Substitut
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-



