













 















 



 



 

 

 



















 

 

 

 








Original		Substitut		Original		Substitut	
	Open/Close		Eject / Surround		0		0
	Input Select		AV / Input / RDS		Clear		Exit / Cancel / Clear
	HDMI		Shift + 0		[i+]/Info		Info / Angle
	Standby		Power		Text		Text / Goto
	1		1		Variable Replay		Vol+
	2		2		Variable Skip		Vol-
	3		3		Guide		Guide / EPG / -/-
	Prog+		CH+ / Page+		Top Menu		D.Menu / Top
	4		4		Disc Menu		Menu / Home
	5		5		Up		Up
	6		6		Left		Left
	Prog-		CH- / Page-		Enter		OK
	7		7		Right		Right
	8		8		Display		Display / Media
	9		9		Down		Down
	Timer Prog		Sleep / Timer		Return		Back / Return
	Setup		Setup / OPT /		Red		Red / Netflix / Search





Original		Substitut		Original		Substitut	
	Green		Green / APP / Repeat		Rec		Rec / Rec Mode
	Yellow/Mode		Yellow / YouTube / Repeat		Subtitle		Subtitle / EQ
	Blue/Search		Blue / Prime Video / Random		1.3x/0.8x PLY		Shift + Play /
	Blue/Search		Shift + Red / Netflix /		O)/Audio		Audio / Lang I/II
	<<		<< / Tune-		Sat Link		Smart / List
	Play		Play / Slow				
	>>		>> / Tune+				
	l<<		l<< / Preset-				
	Stop		Stop / Hold				
	>>l		>>l / Preset+				
	Pause		Pause / Step / Freeze				
	VCR		Shift + 4				
	HDD		Shift + 7				
	DVD		Shift + 2				
	Time Slip		TV/Radio /				
	Dubbing		Picture / Format				
	Rec Mode		Shift + Rec / Rec Mode				

