



Original	Substitut	Original	Substitut
 Open/Close	 Eject / Surround	 II>/Pause/Step	 Pause / Step / Freeze
 On/Standby	 Power	 Camera/Angle	 Info / Angle
 1	 1	 [...] / Subtitle / MP / C onv	 Subtitle / EQ
 2	 2	 O)) / Audio	 Audio / Lang I/II
 3	 3	 I>/Slow	 Shift + Play /
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 I<< Skip	 I<< / Preset-
 7	 7	 <</REV	 << / Tune-
 8	 8	 >>/FWD	 >> / Tune+
 9	 9	 Skip >>I	 >>I / Preset+
 +10	 Guide / EPG / -/--	 Up	 Up
 0	 0	 Left	 Left
 T/Search	 Red / Netflix / Search	 Enter	 OK
 EPM	 Picture / Format	 Right	 Right
 EAM	 Sound / Title	 Top Menu	 D.Menu / Top
 Mute	 Mute / Dimmer	 Down	 Down



