





 


 









 

 





 



 






Original	Substitut
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tv/Fav/Radio	 Fav / Marker / PC

Original	Substitut
 Tv/Fav/Radio	 TV/Radio /
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P +	 CH+ / Page+
 P -	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Aspect	 Picture / Format
 →  [ / ]  ←	 Zoom / Size
 Index / [i+]	 Info / Angle
 Text / Mix	 Text / Goto
 [▼]	 Smart / List
 Dual I/II	 Audio / Lang I/II





Original	Substitut
 [≡o]	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 I<< / [≡?]	 I<< / Preset-
 << / Hold	 << / Tune-
 >> / Size	 >> / Tune+
 >>I / [≡x]/[O]	 >>I / Preset+
 >>I / [≡x]/[O]	 Eject / Surround
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substitut

