


 
 

 
 

 

 






Original		Substitut		Original		Substitut	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Guide/Top		Guide / EPG / -/-
	9		9		Down		Down
	Recall		Back / Return		Tv/FAV/Radio/Set		TV/Radio /
	0		0		Tv/FAV/Radio/Set		Fav / Marker / PC
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat
	A/D/Content Menu		Smart / List		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Vol-		Vol-		[<>]		Picture / Format





































 








 
 
 
 























	Original	Substitut	Original	Substitut
	←[/]→	 Display / Media		
	[i+]/[≡i]	 Info / Angle		
	Text	 Text / Goto		
	Audio	 Audio / Lang I/II		
	Subtitle	 Subtitle / EQ		
	Eject	 Eject / Surround		
	O)I/II	 Shift + Audio / Lang I/II		
	Stop	 Stop / Hold		
	Play/[≡o]	 Play / Slow		
	II/II>/[▼]	 Pause / Step / Freeze		
	I<</[≡?]	 I<< / Preset-		
	<</[≡+]	 << / Tune-		
	>>/[≡◇]	 >> / Tune+		
	>>I/[O]/[≡X]	 >>I / Preset+		







Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O/I/I
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow













 



 

 

 

 

 









 





 




















 



 






Original	Substitut	Original	Substitut
II/II>/[▼]	STEP-FREEZE Pause / Step / Freeze		
I<</[≡?]	PRESET- I<< / Preset-		
<</[≡+]	TUNE- << / Tune-		
>>/[≡◇]	TUNE+ >> / Tune+		
>>I/[O]/[≡X]	PRESET+ >>I / Preset+		







Original		Substitut		Original		Substitut	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Shift + Back / Return
	4		4		Exit/Return		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Guide/Top		D.Menu / Top
	Recall		Back / Return		Down		Down
	0		0		Tv/FAV/Radio/Set		TV/Radio /
	Source		AV / Input / RDS		Tv/FAV/Radio/Set		Setup / OPT /
	Vol+		Vol+		Red		Red / Netflix / Search
	A/D / Content		Smart / List		Green		Green / APP / Repeat
	P+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original	Substitut	Original	Substitut
 [ <> ]	 Picture / Format		
 ←[ / ]→	 Display / Media		
 [i+]/[≡i]	 Info / Angle		
 Text	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Eject	 Eject / Surround		
 O)I/II	 Shift + Audio / Lang I/II		
 Stop	 Stop / Hold		
 Play/[≡o]	 Play / Slow		
 II/II>/[▼]	 Pause / Step / Freeze		
 I<</[≡?]	 I<< / Preset-		
 <</[≡+]	 << / Tune-		
 >>/[≡◇]	 >> / Tune+		
 >>I/[O]/[≡X]	 >>I / Preset+		

