



Original	Substitut	Original	Substitut
	Power		Power
	i		Info / Angle
	Analog Menu		Menu / Home
	Digital Menu		D.Menu / Top
	1		1
	2		2
	3		3
	Input Select		AV / Input / RDS
	4		4
	5		5
	6		6
	ATV/DTV		Smart / List
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	Timer		Sleep / Timer

Original	Substitut	Original	Substitut
	0		0
	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Enter/CH List		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	TV/Radio		TV/Radio /
	[=]		Text / Goto
	[≡o] [≡o]/P↔P		Fav / Marker / PC
	Picture Size		Picture / Format
	[...]		Subtitle / EQ





Original	Substitut	Original	Substitut
 Freeze / [=+]	 Pause / Step / Freeze		
 [=◇]	 Zoom / Size		
 [=?]	 Sound / Title		
 Audio I/II	 Audio / Lang I/II		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

