



Original	Substitut
	AV / Input / RDS
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio / Lang I/II
	0
	Text / Goto
	Vol+
	Menu / Home

Original	Substitut
	CH+ / Page+
	Vol-
	CH- / Page-
	Info / Angle
	Up
	Guide / EPG / -/--
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Blue / Prime Video / Random





Original	Substitut
 Netflix	 +  Shift + Red / Netflix /
 You Tube	 +  Shift + Yellow / YouTube /
 twitch	 Smart / List
 Rakuten Tv	 +  Shift + Green / APP /
 *1	 Setup / OPT /
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Substitut

