 





 

 

 





 

 



 





 

 

 







 
 
 
 
 
 
 
 
 
 
 
 
 
 
Original	Substitut
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 Still	 Eject / Surround
 7	 7
 8	 8
 9	 9
 Aspect	 Zoom / Size
 -/--	 Guide / EPG / -/--
 0	 0
 Prev. Ch.	 Back / Return

Original	Substitut
 Source	 AV / Input / RDS
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Info	 Info / Angle
 Nicam/A2 / Audio	 Audio / Lang I/II
 Auto	 Setup / OPT /
 P.Mode	 Picture / Format
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S.Mode	 Sound / Title
 Down	 Down
 Exit	 Exit / Cancel / Clear





Original	Substitut
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	I<< / Index
	>>I / Cancel
	<< / Reveal
	>> / Hold
	Txt
	Play/Pause / Size
	Play/Pause / Size
	Stop / Subpage
	Subtitle
	Rec Menu
	CH List
	FAV
	USB

Original	Substitut
	DTV / Radio
	DTV
	REC / Repeat
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	Text / Goto
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Subtitle / EQ
	Shift + Rec / Rec Mode
	Smart / List
	Fav / Marker / PC
	Shift + 8

