 




 





 



 

 




 
 







 





 

 
 



 
 

 

 


 





 

 

 

 

 

 





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Text		Text
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Original	Substitut	Original	Substitut
	Audio		Dual
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Display		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu





Original	Substitut	Original	Substitut
 Exit	 Exit	 Timeshift	 Options
 Subtitle	 Subt	 Tv/Radio	 TV/R
 Index	 List		
 Size	 Format		
 Reveal	 D. Menu		
 Play/Hold	 Play		
 Pause	 Pause		
 I<</Cancel	 I<<		
 >>I/Subpage	 >>I		
 Stop	 Stop		
 Rec	 Rec		
 FAV	 Pre Ch		
 <</FAV-	 <<		
 >>/FAV+	 >>		
 Mix	 Smart		
 EPG	 Guide		
 Media	 Media		

