



Original	Substitut
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Lang	Audio / Lang I/II
Tv/Radio	TV/Radio /
Game	D.Menu / Top
FAV	Fav / Marker / PC
Recall	Back / Return

Original	Substitut
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Zoom	Zoom / Size
Timeshift	Setup / OPT /
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Vol+	Vol+





Original	Substitut
	Vol-
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Smart / List
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Substitut

