



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





POWER **DIMMER MUTE** **SHIFT**
TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE
 ▶ || ◻ ●
 TUNE- TUNE+ PRESET- PRESET+
 ◀ ▶ ◀▶ ▶◀
 TITLE LANG VII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 ◀ ◀▶ ▶▶ ▶
 OK
 CLEAR RETURN
 EXIT BACK
 CANCEL LIST
 + SMART +
 VOL MEDIA CH
 — DISPLAY —
 TV DVD CD-STB
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 --- HDMI - SAT PC
 GUIDE 0 FAV MARKER
 EPG
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
Mandis
 shop
 www.mandis.tv



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode



[illegible]