



 
 

 






 

 
 
 

 
 
 

 
 
 

 


 



 






 
 



 



 
 
 
 
 
 
 
 
 
 

 

 
 
 
 


 
 

 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Guide	 Guide
 My Apps	 Media	 Info	 Info
 TV/Radio	 TV/R	 Mute	 Mute
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Page+	 Ch +
 4	 4	 Page-	 Ch -
 5	 5	 Text	 Text
 6	 6	 T.Opt	 Options
 7	 7	 Smart	 Smart
 8	 8	 FAV	 Pre Ch
 9	 9	 Back	 Back
 0	 0	 Exit	 Exit
 List	 List	 OK	 Ok
 Q.View	 Format	 Up	 Up
 Input	 AV	 Down	 Down
 Q.Menu/Subtitle	 Subt	 Right	 Right





Original	Replacement	Original	Replacement
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop/Line TV		Stop
	Rec/*		Rec
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	APP/*		Shift + Media
	AD		Shift + Subt
	Settings		Shift + Options

