

 

 

 

 

 

 



 

 






 


 








 

 









 
 


 



 



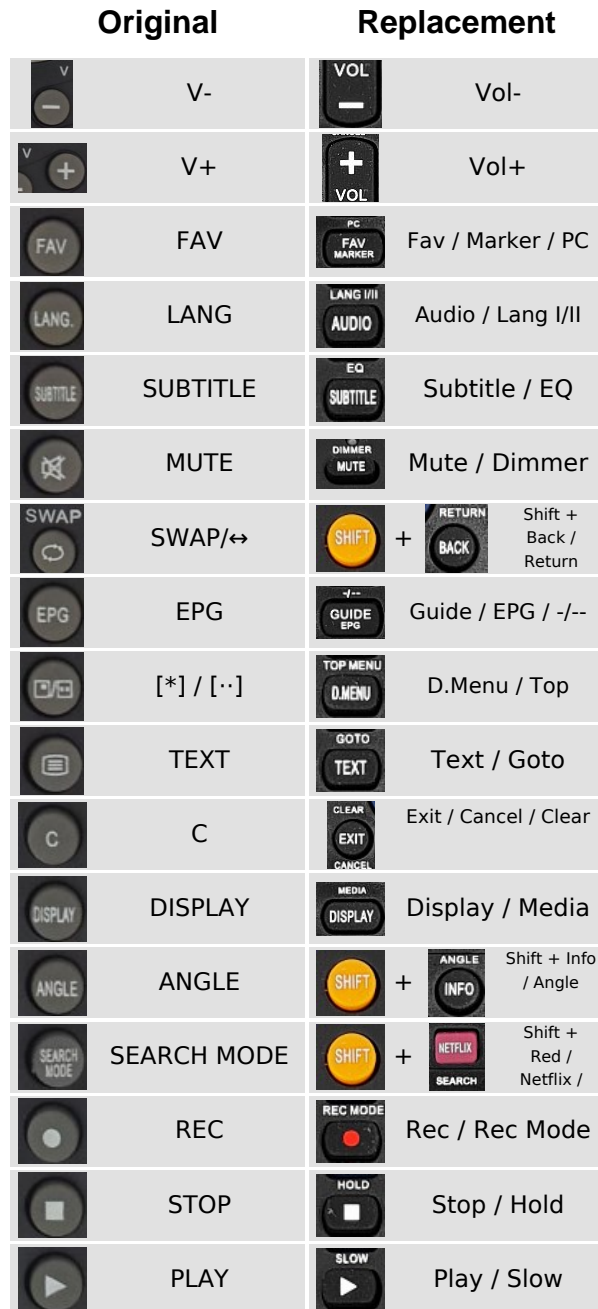


Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- /

Page-

Original	Replacement
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BLUE	 Sound / Title
 TITLE/BLUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





The image shows a black Mandis remote control with the following features:

- Top Row:** Power button (red circle with power symbol), DIMMER MUTE button (black), SHIFT button (yellow).
- Function Buttons:** TV, DVD, SAT, AUX (all blue).
- Navigation & Control:**
 - Row 1: SLOW, STEP-FREEZE, HOLD, REC MODE
 - Row 2: Play, Pause, Stop, Red dot
 - Row 3: TUNE-, TUNE+, PRESET-, PRESET+
 - Row 4: Previous, Next, EQ, SURROUND
 - Row 5: TITLE, LANG UI, EQ, SURROUND
 - Row 6: SOUND, AUDIO, SUBTITLE, Up arrow
 - Row 7: FORMAT, SIZE, TIMER, PROGRAM
 - Row 8: PICTURE, ZOOM, SLEEP, TV/RADIO
 - Row 9: TOP MENU, OPT-TOOLS, GOTO, RDS
 - Row 10: D.MENU, SETUP, TEXT, AV INPUT
- Central Navigation:** HOME, MENU, INFO, OK (center), and four directional arrows (up, down, left, right).
- Volume & Channel:** CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, DISPLAY, RETURN, BACK, + VOL, - VOL, + CH PAGE, - CH PAGE.
- Numeric Keypad:**
 - Row 1: TV, DVD, CD-STS
 - Row 2: 1, 2, 3
 - Row 3: VIDEO, TAPE, TUNER
 - Row 4: 4, 5, 6
 - Row 5: AUX-HDD, USB, BLUETOOTH
 - Row 6: 7, 8, 9
 - Row 7: J-- (with left arrow), HDMI-SAT, PC
 - Row 8: GUIDE EPG, 0, FAV MARKER
- Bottom Section:**
 - Row 1: NETFLIX (red), APP (green), YouTube (yellow), Prime Video (blue)
 - Row 2: SEARCH, REPEAT, REPEAT A-B, RANDOM
- Branding:** Mandis logo with a Wi-Fi icon and the text "Mandis shop" and "www.mandis.tv".