




 

 


 
 

 

 

 

 



 



 

 








Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	DTV		Media
	Rec List		List
	TXT		Text
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back

Original	Replacement	Original	Replacement
	TShift		Eject
	Freeze		3D
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Source		AV
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Menu		Menu
	Exit		Exit
	Vol+		Vol +





Original	Replacement	Original	Replacement
	Vol-		Vol -
	Guide		Shift + Guide
	FAV		Shift + Format
	Pre Ch		Shift + Dual
	CH+		
	CH-		
	Hold / Play-Pause		
	Pause		
	Reveal / <<		
	Size / >>		
	Index / Stop		
	Stop		
	I<<		
	Subpage / >>I		
	Format		
	Audio		
	Subt		
	TV/Radio		

