 



 









 















 









 



 







 



 
















 
 












 
 



 



 

 






 





Original	Replacement	Original	Replacement
 Power	 Power	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Play/Pause/Hold	 Play / Slow	 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop/Size	 Stop / Hold	 ??	 Info / Angle
 Rec Menu	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >> / Cancel	 >> / Tune+	 Right	 Right
 I<< / Index	 I<< / Preset-	 Exit	 Exit / Cancel / Clear
 >>I/Reveal	 >>I / Preset+	 Down	 Down
 Nicam	 Audio / Lang I/II	 Back	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Aspect	 Picture / Format	 List	 Smart / List
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Tv	 TV/Radio /	 Vol-	 Vol-
 Subpage	 D.Menu / Top	 Display	 Display / Media
 PC Auto	 Setup / OPT /	 CH-	 CH- / Page-





Original	Replacement	Original	Replacement
	 1		DTV/Radio
	 2		Media
	 3		-/--
	 4		Repeat
	 5		A-B
	 6		
	 7		
	 8		
	 9		
	 Guide / EPG / -/--		
	 0		
	 Fav / Marker / PC		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		
	 Shift + Pause / Step / Freeze		

