


 

















 

 

 

 

 





 













 









 

 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		Smart Hub		VOD
	Source		SRC		Vol+		VOL +
	HDMI		MEDIA		Vol-		VOL -
	1		1		P+		CH +
	2		2		P-		CH -
	3		3		Guide		-/-- / EPG
	4		4		Menu		MENU
	5		5		Tools		OPT+
	6		6		Info		INFO
	7		7		Up		UP
	8		8		Enter		OK
	9		9		Down		DOWN
	0		0		Right		RIGHT
	TTX/MIX		TEXT		Left		LEFT
	PRE-CH		P/C / FAV		Return		BACK
	Mute		MUTE		Exit		EXIT
	CH List		TV/R		Red		Red (A)





Original	Replacement	Original	Replacement
 Green	 Green (B)		
 Yellow	 Yellow (C)		
 Blue	 Blue (D)		
 Search	 Audio		
 P.Size	 V-FOR		
 Status	 WIDE		
 AD/Subt.	 Subt.		
 E-Manual	 Shift + -/-- / EPG		
 History	 Shift + P/C / FAV		
 >> >>	 Fast Forward		
 Pause	 Pause		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

Original	Replacement	Original	Replacement

