



































































Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 D.Menu / Top
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Rec / Rec Mode
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 TV	 AUX
 Mute	 MUTE	 DVD	 REC MODE
 1	 1	 SLOW	 STEP-FREEZE
 2	 2	 HOLD	 PRESET-
 3	 3	 PRESET+	 TUNE-
 4	 4	 TUNE+	 PRESET-
 5	 5	 PRESET+	 TITLE
 6	 6	 LANG	 EQ
 7	 7	 SURROUND	 SOUND
 8	 8	 AUDIO	 SUBTITLE
 9	 9	 TIMER	 PROGRAM
 CH.List	 CH.LIST	 PICTURE	 ZOOM
 0	 0	 SLEEP	 TV RADIO
 Recall	 RECALL	 TOP MENU	 RDS
 Vol+	 VOL+	 D.MENU	 AV INPUT
 PIC.Mode	 PIC.MODE	 HOME	 ANGLE
 S.Mode	 S.MODE	 MENU	INFO
		OK	OK
		Left	Left
		Right	Right
		Exit	Exit / Cancel / Clear
		Down	Down
		Menu	Menu / Home
		Rec	Rec / Rec Mode
		Timeshift	D.Menu / Top
		Timer	Shift + Sleep / Timer
		Rec.List	Shift + Rec / Rec Mode
		Red	Red / Netflix / Search
		Green	Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		I<< / Preset-
	Blue / Prime Video / Random		>>I / Preset+
	Shift + Picture / Format		<< / Tune-
	TV/Radio /		>> / Tune+
	Sleep / Timer		
	Subtitle / EQ		
	Info / Angle		
	Setup / OPT /		
	Audio / Lang I/II		
	Display / Media		
	Text / Goto		
	Zoom / Size		
	Play / Slow		
	Eject / Surround		
	Pause / Step / Freeze		
	Shift + Stop /		
	Stop / Hold		

