







 



 























































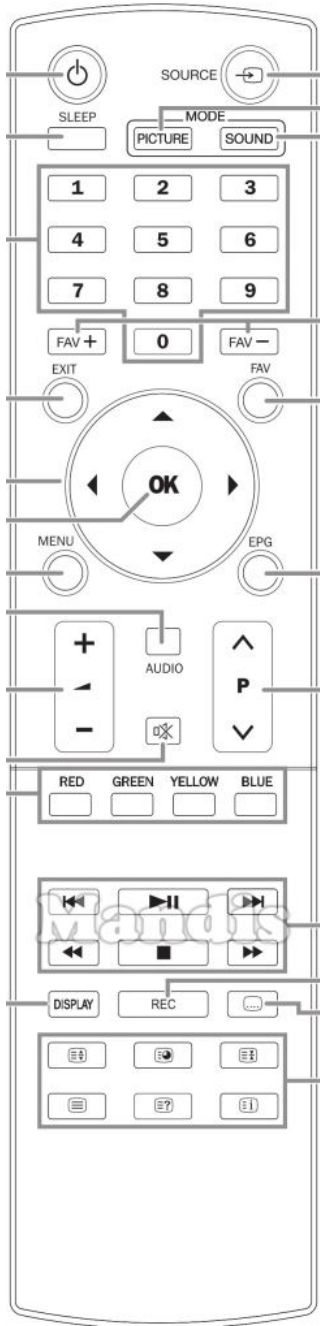






 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Picture Mode		Picture / Format
	Sound Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV+		Shift + Up
	0		0
	FAV-		Shift + Down
	Exit		Exit / Cancel / Clear
	Up		Up
	FAV		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	EPG		Guide / EPG / -/--
	Vol+		Vol+
	Audio		Audio / Lang I/II
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





	Original	Replacement	
	Yellow	 Yellow / YouTube / Repeat	
	Blue	 Blue / Prime Video / Random	
	I<<	 I<< / Preset-	
	Pause	 Pause / Step / Freeze	
	Play	 Play / Slow	
	>>I	 >>I / Preset+	
	<<	 << / Tune-	
	Stop	 Stop / Hold	
	>>	 >> / Tune+	
	Display	 Display / Media	
	Rec	 Rec / Rec Mode	
	[...]	 Subtitle / EQ	
	[≡◇]	 Zoom / Size	
	[≡o]	 Eject / Surround	
	[≡+]	 +  Shift + Stop /	
	[≡]	 Text / Goto	
	[≡?]	 Info / Angle	

	Original	Replacement
	[≡i]	 Smart / List

