



















Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	PRE-CH
	Vol+
	Vol-
	Mute

Original	Replacement
	PR+ / CH+ / Page+
	PR- / CH- / Page-
	CH.List
	Menu
	Smart Hub
	Guide
	Tools
	Info
	Up
	Down
	Right
	Return
	Left
	Enter
	Exit
	Red / Netflix / Search
	Green / APP / Repeat





Original	Replacement	Original	Replacement
 Yellow/C	 Yellow / YouTube / Repeat		
 Blue/D	 Blue / Prime Video / Random		
 E-Manual	 D.Menu / Top		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 << / T<	 << / Tune-		
 AD/Subt.	 Subtitle / EQ		
 AD/Subt.	 Audio / Lang I/II		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >> / T>	 >> / Tune+		

Original	Replacement	Original	Replacement

