



| Original | Replacement |
|----------|-------------|
| | Power |
| | Source |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | TTX/MIX |
| | 0 |
| | PRE-CH |
| | VOL+ |
| | Mute |
| | PR+ |

| Original | Replacement |
|----------|-------------|
| | Vol- |
| | CH.LIST |
| | CH.LIST |
| | PR- |
| | Menu |
| | Smart HUB |
| | Guide |
| | Tools |
| | Up |
| | Info |
| | Left |
| | Enter |
| | Right |
| | Return |
| | Down |
| | Exit |
| | Red/A |





| Original | Replacement |
|----------|-----------------------------|
| Green/B | Green / APP / Repeat |
| Yellow/C | Yellow / YouTube / Repeat |
| Blue/D | Blue / Prime Video / Random |
| E-Manual | D.Menu / Top |
| 3D | Picture / Format |
| AD/Subt | Subtitle / EQ |
| Stop | Stop / Hold |
| I<< | I<< / Preset- |
| << | << / Tune- |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| >>I | >>I / Preset+ |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

