 


 
 




 
 


 

 





 


 





 





 
 


 








 


 


 
 


 



 

 




 

 
 










Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Jump	 Media
 Source	 AV	 FAV.CH	 Pre Ch
 I/II/Audio	 Dual	 OK	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 PR-	 Ch -
 8	 8	 PR+	 Ch +
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/Repeat	 Green
 Menu	 Menu	 Yellow/Zoom	 Yellow
 Info	 Info	 Blue/Goto	 Blue
 Exit	 Exit	 [=+]/DTV/Radio	 TV/R





	Original	Replacement		Original	Replacement
	 [≡◆]/USB/SD	 Options		 P.Size	 Format
	 [≡?]/Timeshift	 Pause			
	 [≡i]/PVR List	 3D			
	 Rec	 Rec			
	 Stop	 Stop			
	 Play/Pause	 Play			
	 <<	 <<			
	 >>	 >>			
	  <<	  <<			
	 >>	 >>			
	 DVD Menu	 D. Menu			
	 Text	 Text			
	 Subtitle	 Subt			
	 Guide	 Guide			
	 Eject	 Eject			
	 P.Mode	 Shift + Format			
	 S.Mode	 Shift + Dual			

