



Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 P+	 Ch +
 7	 7	 P-	 Ch -
 8	 8	 Mute	 Mute
 9	 9	 i	 Info
 0	 0	 EXIT	 Exit
 ↔	 FAV PRE-CH	 Source	 AV
 BACK	 RETURN BACK	 Q. MENU	 E-MANUAL D.MENU
 MENU	 TOP MENU MENU	 EPG	 - / - / GUIDE
 NETFLIX	 APP MEDIA	 TXT	 REPEAT TEXT
 Internet	 HOME SMART	 *	 PICTURE FORMAT
 OK	 OK	 */Q	 ECO 3D





Original		Replacement		Original		Replacement	
	[>]	 OPT	Options				
	Lang	 SOUND DUAL	Dual				
	Subt.	 AD SUBT	Subt				
	[+]	 SHIFT +  PICTURE FORMAT	Shift + Format				
	TV	 SEARCH TV/R	TV/R				
	Red	 A	Red				
	Green	 B	Green				
	Yellow	 C	Yellow				
	Blue	 D	Blue				
	Rec	 REC MODE	Rec				
	Play	 PLAY MODE	Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				

