



Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 P+	 Ch +
 7	 7	 P-	 Ch -
 8	 8	 Mute	 Mute
 9	 9	 i	 Info
 0	 0	 EXIT	 Exit
 ↔	 FAV PRE-CH	 Source	 AV
 BACK	 RETURN BACK	 Q. MENU	 E-MANUAL D.MENU
 MENU	 TOP MENU MENU	 EPG	 - / - / GUIDE
 NETFLIX	 APP MEDIA	 TXT	 REPEAT TEXT
 Internet	 HOME SMART	 *	 PICTURE FORMAT
 OK	 OK	 */Q	 ECO 3D





Original		Replacement		Original	Replacement
	[>]		Options		
	Lang		Dual		
	Subt.		Subt		
	[+]		Shift + Format		
	TV		TV/R		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Rec		Rec		
	Play		Play		
	Stop		Stop		
	Pause		Pause		
	<<		<<		
	>>		>>		

