


 
 




 



 
 
 






Original	Replacement
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Shift + Guide
 Exit	 Exit

Original	Replacement
 Menu	 Menu
 Red/1/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<






Original		Replacement		Original		Replacement	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡◆]/Wide		Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[:::]/Subtitle		Back				



 


 














 
 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio	 + 	Shift + Yellow
	Blue/Angle		Blue

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Time	 + 	Shift + AV
	Zoom	 + 	Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B	 + 	Shift + Play
	C		Yellow
	Title		Info
	Display	 + 	Shift + Info





Original		Replacement		Original		Replacement	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

