



Original	Replacement	Original	Replacement
 Power	 Power	 Tv Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 0	 0
 DTV	 Shift + 1	 Recall	 Back / Return
 DTV	 TV/Radio /	 Vol+	 Vol+
 Radio	 Shift + TV/Radio / Program	 P.Mode	 Picture / Format
 Radio	 Shift + 6	 CH+	 CH+ / Page+
 USB	 Shift + 8	 S.Mode	 Sound / Title
 DVD	 Shift + 2	 Vol-	 Vol-
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Source	 AV / Input / RDS





Original	Replacement	Original	Replacement
	Down		Down
	Info		Info / Angle
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Text Hold		Shift + Stop /
	Zoom/Text/DVD		Zoom / Size
	Power/Display		Display / Media
	Power/Display		Shift + Power
	DVD Menu		D.Menu / Top
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop/Eject		Stop / Hold
	Stop/Eject		Eject / Surround
	Rec List/DVD		Setup / OPT /
	Rec List/DVD		Smart / List
	<<< PVR/DVD		<<< / Tune-
	>>> PVR/DVD		>>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Red/Goto		Shift + Text /
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Green/A-B		Shift + Yellow / YouTube /
	Yellow/Angle/3D		Yellow / YouTube / Repeat
	Yellow/Angle/3D		Shift + Info / Angle
	Blue/Repeat		Blue / Prime Video / Random
	Blue/Repeat		Shift + Green / APP /

