 

 







 



 
 


 

 

 

 



 

 

 







Original	Replacement	Original	Replacement
	Power		Tv Guide
	Mute		Guide / EPG / -/-
	DTV		0
	DTV		Recall
	Radio		Vol+
	Radio		P.Mode
	USB		CH+
	DVD		S.Mode
	1		Vol-
	2		FAV
	3		CH-
	4		Menu
	5		Up
	6		Exit
	7		Left
	8		OK
	9		Right
			Source





Original		Replacement		Original		Replacement	
	Down		Down		Rec List/DVD		Setup / OPT /
	Info		Info / Angle		Rec List/DVD		Smart / List
	Aspect		Shift + Picture / Format		<< PVR/DVD		<< / Tune-
	Sleep		Sleep / Timer		>> PVR/DVD		>> / Tune+
	Audio		Audio / Lang I/II		Pause		Pause / Step / Freeze
	Subtitle		Subtitle / EQ		Play		Play / Slow
	Text		Text / Goto		Red/Goto		Shift + Text /
	Text Hold		Shift + Stop /		Red/Goto		Red / Netflix / Search
	Zoom/Text/DVD		Zoom / Size		Green/A-B		Green / APP / Repeat
	Power/Display		Display / Media		Green/A-B		Shift + Yellow / YouTube /
	Power/Display		Shift + Power		Yellow/Angle/3D		Yellow / YouTube / Repeat
	DVD Menu		D.Menu / Top		Yellow/Angle/3D		Shift + Info / Angle
	Rec		Rec / Rec Mode		Blue/Repeat		Blue / Prime Video / Random
	I<<		I<< / Preset-		Blue/Repeat		Shift + Green / APP /
	>>I		>>I / Preset+				
	Stop/Eject		Stop / Hold				
	Stop/Eject		Eject / Surround				

