



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  [TV] |  TV/Radio / |
|  Internet |  Smart / List |
|  ↔ |  Fav / Marker / PC |
|  Mute |  Mute / Dimmer |
|  Vol+ |  Vol+ |

| Original | Replacement |
|---|---|
|  Vol- |  Vol- |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |
|  OK |  OK |
|  Menu |  Menu / Home |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  i |  Info / Angle |
|  EPG |  Guide / EPG / -/- |
|  TXT |  Text / Goto |
|  Lang. |  Audio / Lang I/II |
|  Subt. |  Subtitle / EQ |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | Red |  | Red / Netflix / Search |
|  | [>] |  | Picture / Format |
|  | [+] |  | Zoom / Size |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | *1/O |  | Shift + 1 |
|  | *2/Q |  | Shift + 2 |
|  | Blue |  | Blue / Prime Video / Random |
|  | Rec |  | Rec / Rec Mode |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | >> |  | >> / Tune+ |
|  | << |  | << / Tune- |
|  | Stop |  | Stop / Hold |
| | | | |
| | | | |
| | | | |

