



 



 


 
 


 
 


 









 

 





 



 








 



 



 









 



 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Up	 Up
 --	 Guide	 PR+	 Ch +
 P<P	 Pre Ch	 PR-	 Ch -
 I-II	 Dual	 Down	 Down
 1	 1	 Right	 Right
 PP	 Eject	 Left	 Left
 2	 2	 M	 Ok
 3	 3	 M	 Menu
 4	 4	 [i]/Info	 Info
 5	 5	 Red/Sound	 Red
 6	 6	 Green/Picture	 Green
 7	 7	 Yellow/Feature	 Yellow
 8	 8	 Blue/Install	 Blue
 9	 9	 TV	 TV/R
 0	 0	 AV	 AV
 Vol-	 Vol -	 [=]/Text	 Text





Original	Replacement
 [≡o]	 Options
 [≡+]	 Subt
 [≡x]	 Format
 [·≡]	 3D
 [≡?]	 Exit
 [≡i]	 Smart
 [≡♦]	 Media

Original	Replacement

