 


 




 


 








 

 
 

 





 
 

 











Original	Replacement	Original	Replacement
 Power	 Power	 [=]	 Text
 Mute	 Mute	 Guide	 Guide
 V.Format	 Format	 Exit	 Exit
 Sleep	 Sleep	 Up	 Up
 FAV	 Pre Ch	 Down	 Down
 Tv/♪	 TV/R	 Right	 Right
 AV	 AV	 Left	 Left
 SAT	 Media	 OK	 Ok
 Zoom	 Eject	 ↑	 Shift + Up
 Camera	 Smart	 ↓	 Shift + Down
 Vol+	 Vol +	 Red	 Red
 Vol-	 Vol -	 Green	 Green
 CH+	 Ch +	 Yellow/Audio	 Yellow
 CH-	 Ch -	 Blue/[...]	 Blue
 Info	 Info	 1	 1
 Back	 Back	 2	 2
 Menu	 Menu	 3	 3





Original		Replacement		Original		Replacement	
	4		4		>		Dual
	5		5		> <		3D
	6		6		[]		List
	7		7		[->]		D. Menu
	8		8				
	9		9				
	0		0				
	≡>		Options				
	V		Subt				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				

