
 

 



 
 


 
 
 

 

 

 





 


 










Original	Replacement
 Power	 Power
 Source	 AV
 Top Menu	 Menu
 Disc Menu	 D. Menu
 Smart TV	 TV/R
 Bluetooth	 Guide
 Home	 Smart
 [=]	 Text
 OK	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement
 Open/Close	 Eject
 Return	 Back
 III	 Options
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 <	 <<
 >	 >>
 +	 Vol +
 -	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4



