





















 







Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 Subtitle / EQ	 Subtitle / EQ
 Audio / Lang I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AD	 Sound / Title
 0	 0

Original	Replacement
 ATV/DTV	 TV/Radio /
 Vol+	 Vol+
 Info / Angle	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute / Dimmer	 Mute / Dimmer
 PR-	 CH- / Page-
 Quick	 Smart / List
 Guide / EPG / -/-	 Guide / EPG / -/-
 Up	 Up
 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu / Home	 Menu / Home
 Down	 Down
 Return	 Back / Return





	Original	Replacement	Original	Replacement
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	[≡?]	Display / Media		
	[≡+]	Stop / Hold		
	[≡◆]	Zoom / Size		
	Timer/[≡x]	Sleep / Timer		

